


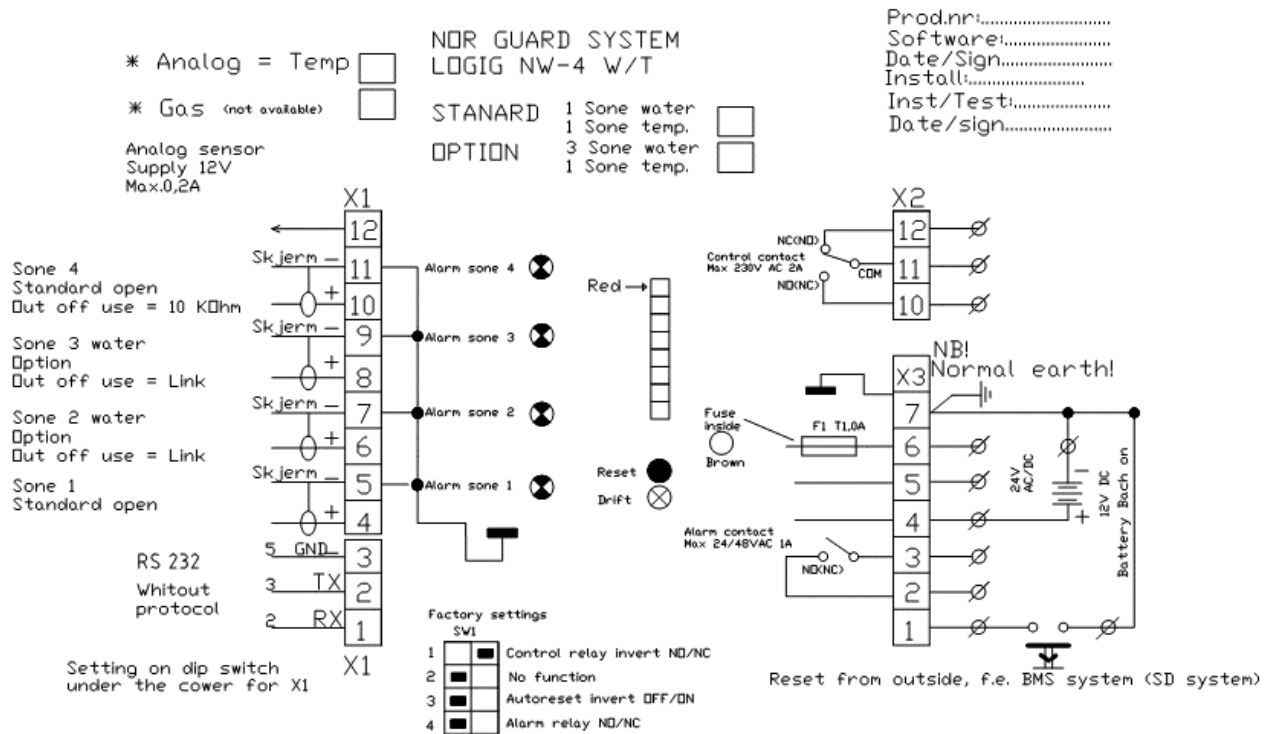

Factory settings are only an recommendation
You are self responsible for settings and for
your own demands for funktions and best security
by testing when you are doing the drawings and installation
Cotacts are shown without voltages and without current

Seperate trafo 24 V AC is required for Nor-Guard System.
Must never be mixed with systems with different earth potenslal.
Curret needed: 100 mA pr.system. With Link + 5mA pr.link.

Reservation for changes without warnings