



Factory settings are only an recomadation  
 You are self responsible for settings and for  
 your own demands for funktions and best security  
 by testing when you are doing the drawings and instalation  
 Cotacts are shown without voltages and without current

Seperate trafo 24 V AC is required for Nor-Guard System.  
 Must never be mixed with systems with different earth potenslal.  
 Curret needed: 100 mA pr.system. With Link + 5mA pr.link.

Reservation for changes without warnings